November 5, 2025



GV-R1354 Mini Reader



Introduction

GV-R1354 mini card reader, measuring just 8 cm in height, can be integrated into standard access control systems via its Wiegand and RS-485 interfaces. Compact yet fully featured, GV-R1354 is housed in a **weather-sealed**, **IP56-compliant** enclosure, making it ideal for both indoor and outdoor applications.

Features

- Access control card recognition
- · Wiegand interface for third-party integration
- RS-485 interface for longer distance installation
- 13.56 MHz ISO14443A
- MIFARE® DESFire® card support
- GeoVision access cards with GID (GeoVision Identifier) support
- IP56 ingress protection

Specifications

Frequency	13.56 MHz ISO14443A
Wiegand Interface	Wiegand 26 / 34 bits, distance 100 m (328.1 ft)
RS-485 Interface	RS-485, 9,600 bps, distance 600 m (1968.50 ft)
Read Range	3 ~ 5 cm (max)
LED	Green / Red Bi-color LED x 1 (Status / Power)
Audio Signal	Buzzer
Color	Black
ID Setting	DIP Switch
Supported ID Formats	UID, GID, DES-ID
Power Source	DC 9 ~ 24V
Power Consumption	100 mA (max)
Operating Temperature	-20 °C ~ 65°C (-4 °F ~ 149 °F)
Operating Humidity	20~ 80% RH (non-condensing)
Dimensions (L x W x H)	81 x 43 x 18 mm / 3.2 x 1.7 x 0.7 in
Weight	40 g / 0.09 lb
Ingress Protection	IP56
Certification	FCC, LVD, UKCA

GV-R1354



Note:

- 1. RS-485 interface only supports GeoVision controllers, while Wiegand interface supports both GeoVision and 3rd party controllers (Wiegand 26 / 34 bits).
- 2. Connecting the reader to a third-party controller could limit the maximum Wiegand connection distance to 30 m (98.43 ft).GV
- 3. Specifications are subject to change without notice.

Packing List

- 1. GV-R1354
- 2. Data Cable

Options

GV-Access Card, Key Fob, Sticker

13.56 MHz cards, key fobs, stickers, and MIFARE® DESFire® cards are available.

Compatible Products


• GV-ASManager: V5.3.3 or later

• GV-AS Controllers: GV-AS210 / 2110 / 2120 / 410 / 4110 / 4111, GV-AS810 / 8110 / 8111, GV-AS1620, GV-EV48

Note:

- To connect the GV-R1354 reader to GV-AS Controllers via RS-485, it is required to use the following products and versions: GV-AS210 / 2110 / 2120 / 410 / 4110 / 4111 V2.40 (or later), GV-AS810 / 8110 / 8111 V2.6 (or later), GV-AS1620 V1.04 (or later), and GV-EV48 V2.32 (or later).
- 2. GV-AS810 / 8110 / 8111 controllers support GV-R1354 exclusively through the controller's RS-485A interface.

Dimensions

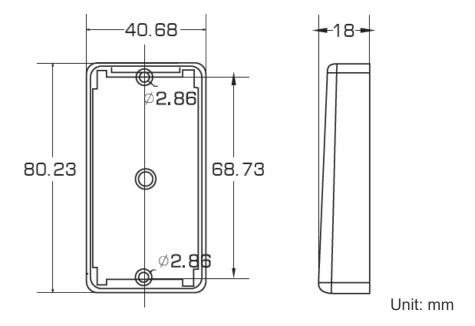

-2-