

Quick Start Guide

GV-Enterprise



Thank you for purchasing GV-Enterprise. This guide is designed to assist the new user in getting immediate results from GV-Enterprise. For advanced information on how to use GV-Enterprise, please refer to *GV-Enterprise User's Manual*.



© 2025 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate. GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained herein. Features and specifications are subject to change without notice.

GeoVision, Inc.
9F, No. 246, Sec. 1, Neihu Rd.,
Neihu District, Taipei, Taiwan
Tel: +886-2-8797-8377
Fax: +886-2-8797-8335
<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and GV series products are trademarks of GeoVision, Inc. *Windows* is the registered trademark of Microsoft Corporation.

June 2025

Scan the following QR codes for product warranty and technical support policy:



[Warranty]



[Technical Support Policy]

Preface

Welcome to the *GV-Enterprise Quick Start Guide*.

This Quick Start Guide is designed for the following GV-Software:

Product	Version
GV-Enterprise	V1.0.0

Note: To support the GV-SNVR, GV-RNVR, and UA-SNVR series, UA-HD DVRs, and the latest GV-IP Cameras, UA-IP Cameras, and GV-Video Servers, you must download and use the following software versions from the [GeoVision Website](#):

1. GV-Enterprise V1.1.0 or later
2. GV-Enterprise Plugin V1.1.0 or later

For the complete list of newly supported IP devices, see *Version 1.1.0* in the [GV-Enterprise Version History](#).

Contents

Preface	i
Chapter 1 Introduction	1
1.1 Minimum System Requirements	1
1.2 License	2
1.3 Compatible GeoVision Software and IP Devices	2
Chapter 2 Installation and Login	3
2.1 Installing GV-Enterprise	3
2.2 Logging into GV-Enterprise	5
2.3 Installing GV-Enterprise Plugin on GV-Software	6
Chapter 3 Adding Devices	8
3.1 Searching for Devices	8
3.2 Adding Devices Manually	9
3.3 Assigning Devices to GV-Software	10

Chapter 1 Introduction

Welcome to the GV-Enterprise Quick Start Guide. This quick guide will guide you through the basic settings of GV-Enterprise, such as software installation and assigning cameras to the GV-Software it manages. For more details, see *GV-Enterprise User's Manual*.

1.1 Minimum System Requirements

The PC used to install GV-Enterprise must meet the following minimum system requirements.

OS		64-bit Windows 10 / 11, Server 2019 / 2022
CPU		6 th Generation i5-6400, 2.70 GHz
Memory		8 GB
Hard Disk	Installation	1 GB
	OS	32 GB
Graphics		Intel internal graphics
LAN		Gigabit Ethernet
Microsoft SQL Server		2014
Software		.Net Framework 3.5

Note:

1. GV-Enterprise can be installed either with Microsoft SQL Server on the same PC, or on a separate PC.
2. It is recommended that GV-Enterprise be installed on a separate PC from the GV-Software connected. If GV-Enterprise and GV-Control Center are installed on the same PC, the system requirements of the [GV-Control Center](#) must be met.
3. Users of **Windows Server 2019 and 2022** must install .Net Framework 3.5 and Microsoft SQL Server. For **Windows 10 and 11** users, the two applications are installed alongside GV-Enterprise.

1.2 License

License	GV-Control Center V4 USB dongle for GV-Enterprise to be executable
Note: GV-Control Center V4 has two types of licensing, USB dongle licensing and software licensing. GV-Enterprise is only compatible with GV-Control Center V4 USB dongle.	

1.3 Compatible GeoVision Software and IP Devices

GV-Enterprise can connect to and manage the following versions of GV-Software:

- **GV-Control Center:** V4.2.0 or later
- **GV-Edge Recording Manager:** V2.3.0.1 or later
- **GV-Recording Server / Video Gateway:** V2.1.1 or later
- **GV-VMS:** V18.3.2 with Patch, V17.4.7 with Patch or later

GV-Enterprise can connect to and manage the following IP devices:

- **GV-IP Cameras:** GV-ABL / ADR / AVD / BX / EBD / EFD / FER / GBL / GDR / GEB / GEBF / GPH / GVD / MFD / PBL / PDR / PFER / PTZ / QFER / QSD / RBL / REB / RFER / SD / TBL / TDR / TVD series
- **UA-IP Cameras:** UA-B580 / R500 / R580 / R800 series
- **GV-Video Servers**
- **SNVRs:** GV-SNVR / GV-RNVR / UA-SNVR series
- **HD DVRs:** UA-HD DVRs

Note: Only GV-Control Center and GV-Edge Recording Manager are supported for receiving streams from the GV-SNVR, GV-RNVR, and UA-SNVR series, as well as UA-HD DVRs.

The supported versions are:

1. GV-Control Center V4.2.1.12 or V4.3.0 or later
 2. GV-Edge Recording Manager V2.3.0.1 or later
-

Chapter 2 Installation and Login

 
To begin, install the **GV-Enterprise** software on a dedicated computer and the **GV-Enterprise Plugin** on the GV-Software system to be managed.

2.1 Installing GV-Enterprise


GV-Enterprise must be installed on a separate computer from the GV-Software system it manages.

Note: Prior to GV-Enterprise installation, users of **Windows Server 2019 and 2022** must install .Net Framework 3.5 and Microsoft SQL Server. For **Windows 10 and 11** users, these two applications are installed alongside GV-Enterprise. See *Appendix* in the user's manual for installation details.


1. Before installing GV-Enterprise, ensure the following:
 - A. GV-Control Center USB dongle or software license has been installed.
 - B. .Net Framework 3.5 and Microsoft SQL Server have been installed for Windows Server 2019 and 2022. See *Appendix A* and *B* for installation details.
2. Download and install **GV-Enterprise** from [GeoVision's website](#).
3. During the installation process,
 - A. Install the application to the default path: C:\GV-Enterprise, or click **Browse** to select a location to install it.

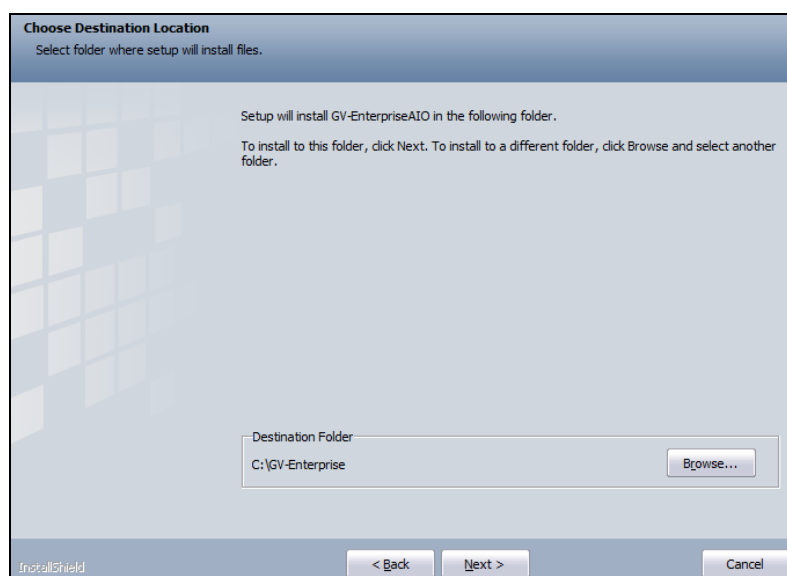


 - B. When you are asked to create the password for the SQL Server administrator account (sa), type a password, and click **OK**.

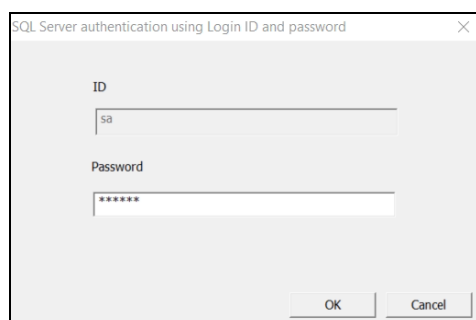

 4. After the installation is complete, the **Service Configure** dialog box appears.
 - A. In **Plugin Authentication**, set an authentication password for connecting *GV-Enterprise Plugin*, installed with the GV-Software to be managed, to GV-Enterprise Service.
 - B. Click **Test database connection**. The message “Connect to datasheet succeed” appears to indicate the SQL Server connection is created.
5. Click **OK** to apply the settings.

 Once the SQL Server is connected, the icon  with a tick will be minimized to the system tray. You can click the icon and select **Service Configure** to adjust the connection settings, or select **Database Import / Export** to import or export GV-Enterprise database.

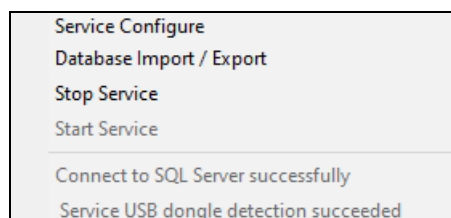


For details on Service Configure, see *2.1 Installing GV-Enterprise* in the user’s manual.

2.2 Logging into GV-Enterprise

For first-time users, you need to add a license to start the services.

Upon first-time startup of GV-Enterprise, you will be prompted to set a supervisor account for GV-Enterprise.

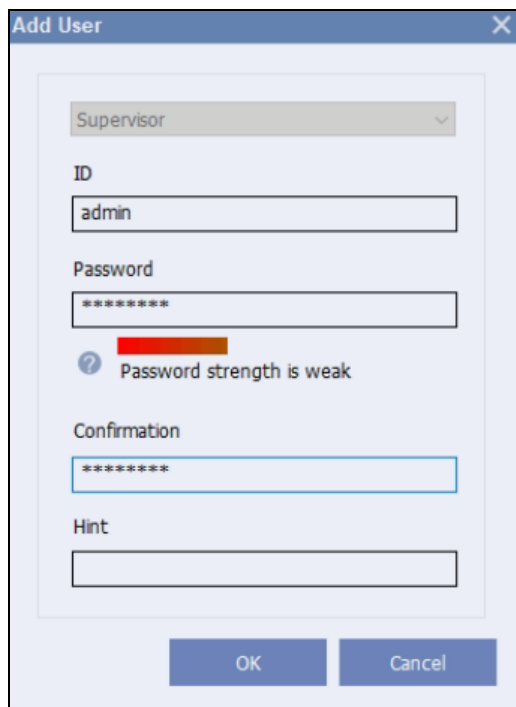


1. Type an **ID** and **Password** for the GV-Enterprise supervisor account.
2. In **Confirmation**, type the password again to confirm.
3. Optionally type a hint to remind you of the set password.
4. Click **OK**.
5. On the ID -admin dialog box, type an e-mail address which will be used to retrieve a forgotten password, and then click the **E-Mail** icon to configure an e-mail server. Alternatively, click **Cancel** to skip the settings.
6. On the Login window, type the **ID** and **Password** of the supervisor account again.
7. Click **OK** to log in.

2.3 Installing GV-Enterprise Plugin on GV-Software

Before GV-Software can be connected to and managed by GV-Enterprise, the required **GV-Enterprise Plugin** must be installed on it first. When GV-Software is connected to GV-Enterprise, its administrator rights, including the ability to upgrade GV-Software and add/remove cameras, are automatically turned over to GV-Enterprise for centralized management.

To install GV-Enterprise Plugin:

 
1. Stop and close all services of GV-Software.
2. Download and install **GV-Enterprise Plugin** from [GeoVision's website](#).
3. Once installed, you are prompted to set the required configurations for connecting GV-Enterprise Plugin, and thereby GV-Software to GV-Enterprise.

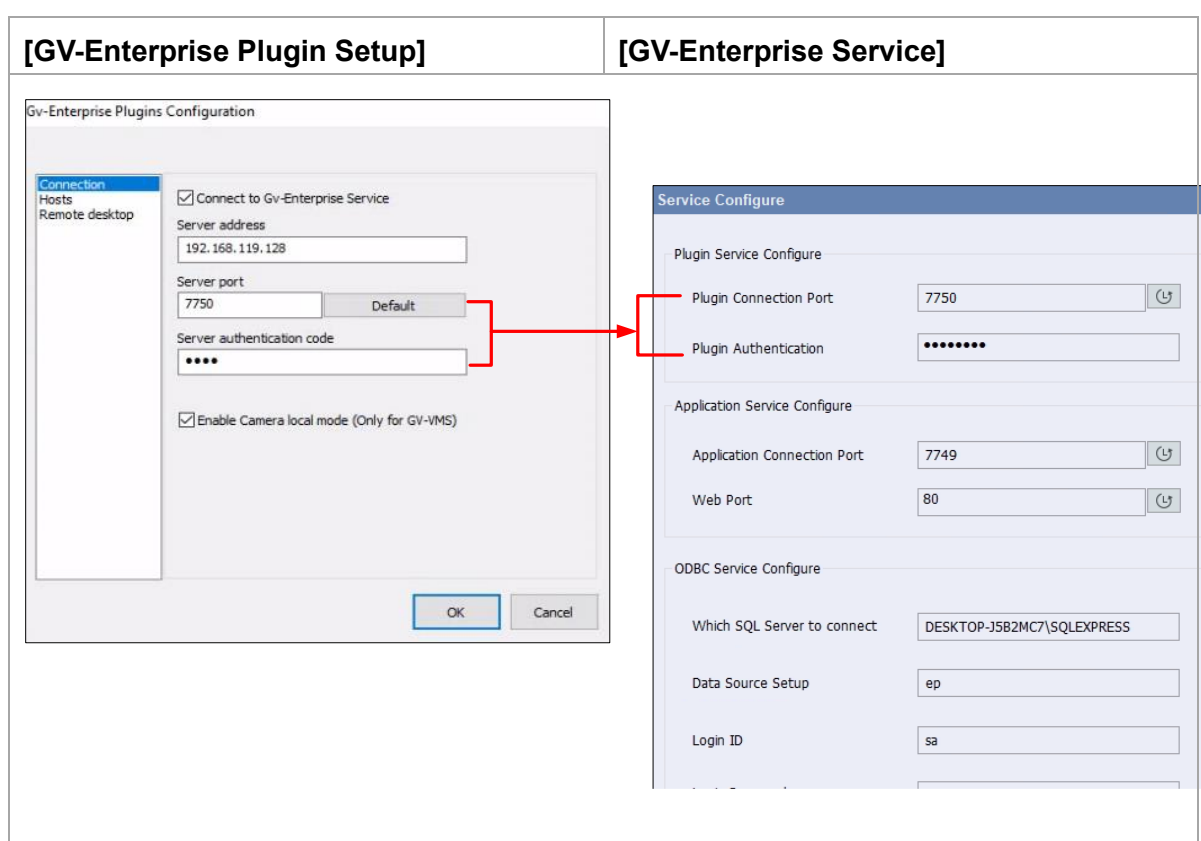

4. Select **Connect to GV-Enterprise Service** and type the **Server IP Address** of GV-Enterprise.
5. In **Server Port**, keep the default port 7750. You can also change the port to match the Plugin Connection Port.
6. In **Server Authentication Code**, type the same password as defined by Plugin

Authentication (see Step 4-A, *2.1 Installing GV-Enterprise*).

7. By default, **Enable Camera Local Mode (only for GV-VMS)** is enabled, which retains the cameras already connected to the GV-VMS when connected to GV-Enterprise.
8. Click **OK** to apply the settings.

After GV-Enterprise Plugin has been properly configured, run GV-Software and it will be automatically connected to GV-Enterprise. A tick will be displayed on the GV-Enterprise Plugin icon in the system tray , indicating successful connection.

IMPORTANT: The GV-VMS system operate in two ways. One method is to utilize GV-Enterprise to assign cameras to GV-VMS. The other is **Camera Local Mode** to retain the cameras already connected to GV-VMS when connected to GV-Enterprise. If the **Enabled Camera Local Mode** is disabled, the previously assigned cameras will be removed from the GV-VMS once connected to GV-Enterprise.

For details on the settings of GV-Enterprise Plugin, see *2.3 Installing GV-Enterprise Plugin on GV-Software* in the user's manual.



Chapter 3 Adding Devices


There are two ways to add devices (cameras / SNVRs / HD DVRs) to GV-Enterprise:







- **Searching for IP Devices:** Detect and add devices within the same LAN as GV-Enterprise. See *section 3.1*.
- **Adding IP Device Manually:** Add devices manually in the Camera Connection Information window or the SNVR Connection Information window. See *section 3.2*.


3.1 Searching for Devices

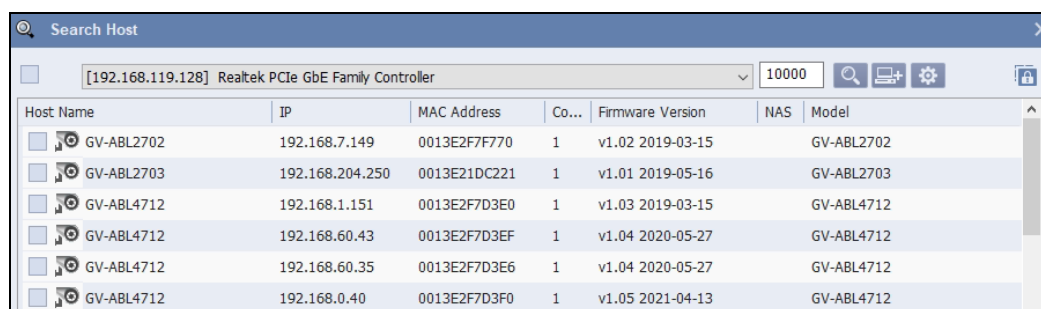Only GeoVision and USAVision IP devices are compatible with the searching feature for locating devices (cameras / SNVRs / HD DVRs) within the same LAN. To add ONVIF IP devices, see *3.2 Adding Devices Manually*.

 1. To detect cameras within the same LAN as GV-Enterprise, at the top left, click **Main Menu**  > **Search IP Devices**. The search starts.
2. If the system has more than one network interface card, select one and click **Search IP Device**  again.





Host Name	IP	MAC Address	Co...	Firmware Version	NAS	Model
 GV-ABL2702	192.168.7.149	0013E2F7F770	1	v1.02 2019-03-15		GV-ABL2702
 GV-ABL2703	192.168.204.250	0013E21DC221	1	v1.01 2019-05-16		GV-ABL2703
 GV-ABL4712	192.168.1.151	0013E2F7D3E0	1	v1.03 2019-03-15		GV-ABL4712
 GV-ABL4712	192.168.60.43	0013E2F7D3EF	1	v1.04 2020-05-27		GV-ABL4712
 GV-ABL4712	192.168.60.35	0013E2F7D3E6	1	v1.04 2020-05-27		GV-ABL4712
 GV-ABL4712	192.168.0.40	0013E2F7D3F0	1	v1.05 2021-04-13		GV-ABL4712


3. Select a camera. You are prompted to type its login **ID** and **Password**.
4. Once the desired cameras have been selected, click **Add to Enterprise Camera Connection Information**  to add.

For details on the Search IP Device window, see *3.3.1 Searching for Devices* in the user's manual.

3.2 Adding Devices Manually

To manually add a device (camera / SNVR / HD DVR) to GV-Enterprise, follow the steps below.

1. Click **Add Device**  in the **Camera Connection Information** window or the **SNVR Connection Information** window, depending on the device.
2. Type the **IP Address**, **Port**, and login **ID & Password** of the camera, select **GeoVision** or **Protocol** from the Brand dropdown list, and click **Update Information**  to detect the IP device.

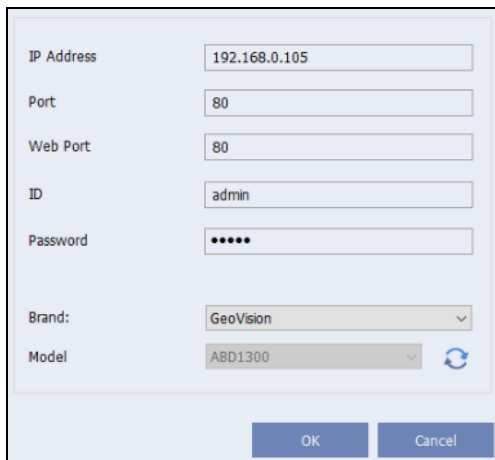

IP Address	192.168.0.105
Port	80
Web Port	80
ID	admin
Password	*****
Brand:	GeoVision
Model	ABD1300

OK Cancel

 
3. Click **OK**. The device is added to GV-Enterprise.

For details on adding devices, see *3.3.2 Adding Devices Manually* in the user's manual.

3.3 Assigning Devices to GV-Software

To assign cameras to GV-VMS, GV-Recording Server, GV-Video Gateway, or a Group, follow the steps below.

1. Simply drag cameras from the **Camera Connection Information** window to the desired GV-Software in the Host List or a Group.

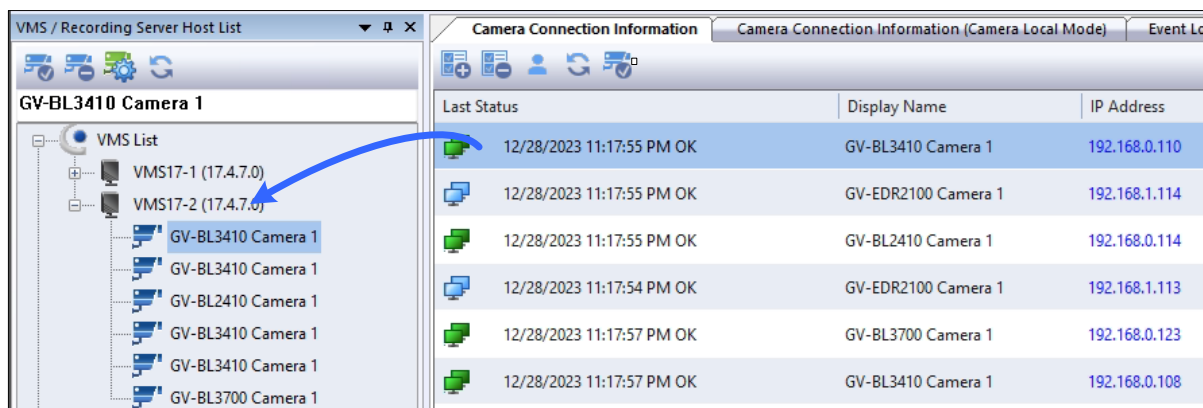

2. Click **Apply to All**  in the Host List for the changes to take effect.

When a camera is assigned to a GV-Software, the camera icon will be shown in green



IMPORTANT: It is not required for you to assign cameras to GV-Control Center and GV-Edge Recording Manager. All cameras and software added to GV-Enterprise will be automatically reflected in the two GV-Software. The Hosts (cameras) displayed on the two GV-Software are then determined by the access rights of the user account logging in.

Note: Support for assigning analog channels of HD DVRs to GV-VMS and GV-Recording Server will be added in a future update.