



How to Upgrade GV-NVR to GV-VMS

Article ID: GV1-15-01-13
Release Date: 01/13/2015
Revised Date: April 26, 2024

Applied

GV-NVR V8.9.1A or later GV-VMS

Summary

You can upgrade your *GV-NVR* software directly to GeoVision's latest video management software *GV-VMS*. GV-VMS supports the following configuration settings from GV-NVR:

- User Account
- Camera List
- Camera Name
- Recorded Video Events

Note: GV-VMS doesn't support the upgrade directly from GV-DVR and GV-Hybrid DVR.


How to upgrade

- 1. Uninstall the GV-NVR.
 - A. Close any open programs because your computer will restart during the uninstalling process.
 - B. Click Windows **Start** button, select **Control Panel**, and select **Uninstall a Program** under Programs.







C. In the list of currently installed programs, select GeoVision Digital Surveillance System, and click Uninstall/Change.

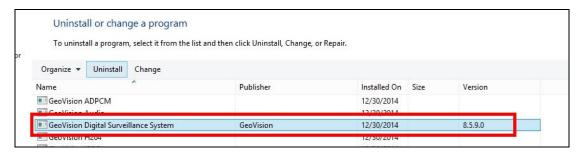


D. When you are prompted to confirm removal of the program, click **Yes**.

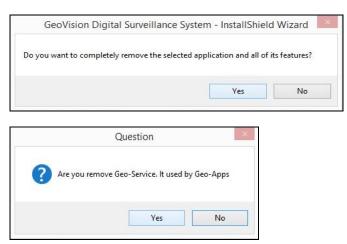

 - 2. Download and install **GV-VMS** from GeoVision download page:
 - GV-VMS V18 for AI Integration (Paid Initial License Required)
 https://www.geovision.com.tw/download/product/GV-VMS%20V18




GV-VMS V17 (Free 32 GV-IP CAM Channels; Win 8 or above required)
 https://www.geovision.com.tw/download/product/GV-VMS%20V17

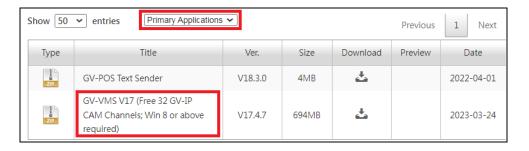





 
- 3. Convert database from GV-NVR to GV-VMS.
 - A. When prompted during GV-VMS installation, select **Yes** to convert the database.



B. In this dialog box, enter GV-NVR admin's ID and Password.




C. In this dialog box, select the camera database you wish to convert to GV-VMS.

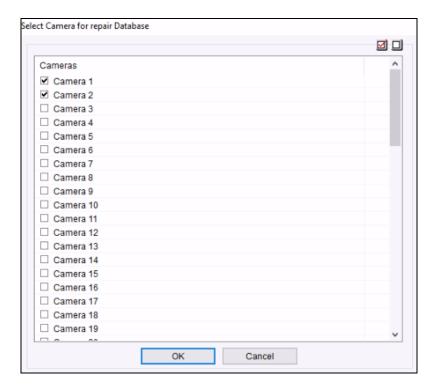






 D. When asked to confirm the database conversion, click Yes to proceed.



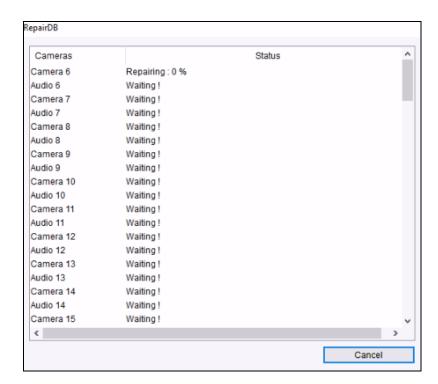

E. When the database conversion is complete, this message appears, and GV-VMS automatically restarts after 10 seconds.

