

# Quick Start Guide

## *GV-IP Camera*



- GV-GBL12811
- GV-GVD12810

Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use.

T-12MP-QG-B



© 2026 GeoVision, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.

Every effort has been made to ensure that the information in this manual is accurate. GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained herein. Features and specifications are subject to change without notice.

GeoVision, Inc.  
9F, No. 246, Sec. 1, Neihu Rd.,  
Neihu District, Taipei, Taiwan  
Tel: +886-2-8797-8377  
Fax: +886-2-8797-8335  
<http://www.geovision.com.tw>

Trademarks used in this manual: *GeoVision*, the *GeoVision* logo and *GV* series products are trademarks of GeoVision, Inc. *Windows* is the registered trademark of Microsoft Corporation.

May 2026

**Scan the following QR codes for product warranty and technical support policy:**



[Warranty]



[Technical Support Policy]

## Warning and Caution



- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. (We shall not be responsible for any problems caused by unauthorized repair or maintenance.)
- Keep away from liquid while in use.
- In the use of the product, you must be strict compliance with the electrical safety regulations of the nation and region. When the product is mounted on wall, the device shall be firmly fixed.
- Do not use camera beyond specified voltage range.
- Do not drop the camera or subject it to physical shock.
- Avoid touching the camera lens.
- If cleaning is necessary, please use clean cloth to wipe it gently.
- Do not aim the camera at the sun or extra bright place.
- Do not place the camera in extremely hot, cold, dusty or damp locations, and do not expose it to high electromagnetic radiation.
- To avoid heat accumulation, good ventilation is required for operating environment.

## Contents

<b>1. Overview</b> .....	17
1.1 GV-GBL12811 Overview .....	17
1.2 GV-GVD12810 Overview .....	19
<b>2. Installation</b> .....	21
2.1 Connecting the Network Cable .....	21
2.2 GV-GBL12811 Installation .....	22
2.3 GV-GVD12810 Installation .....	24
<b>3. Accessing the Network Camera</b> .....	27
3.1 Looking Up the Dynamic IP Address .....	27
3.2 Configuring the IP Address .....	29
<b>4. The Web Interface</b> .....	30
<b>5. Upgrading System Firmware</b> .....	32
<b>6. Restoring to Factory Default</b> .....	33

# 1. Overview


## 1.1 GV-GBL12811 Overview

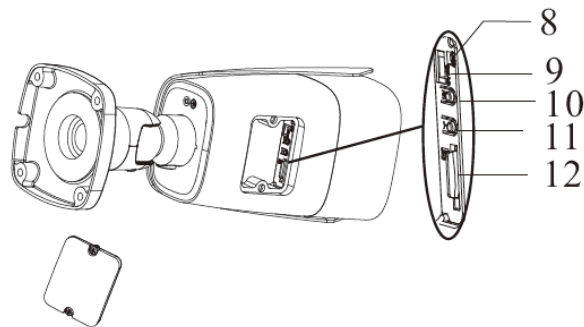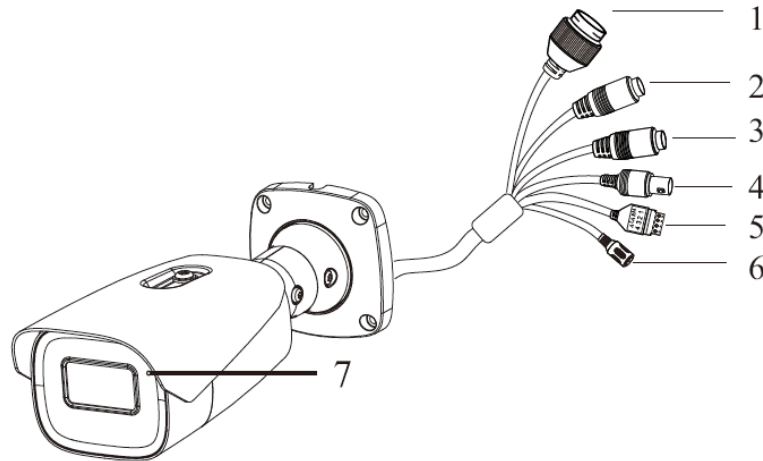

1	Ethernet Connector	7	Microphone
2	Audio Input (MIC)	8	Reset
3	Audio Output (HP)	9	DC IN & CVBS Interface
4	CVBS Video Output	10	Zoom -
5	Alarm Input / Output	11	Zoom +
6	Power Connector	12	microSD Card Slot

**Note:**

1. It is recommended to install the water-proof connector for outdoor installation.
2. To load default settings, press and hold the default button for 10 seconds.

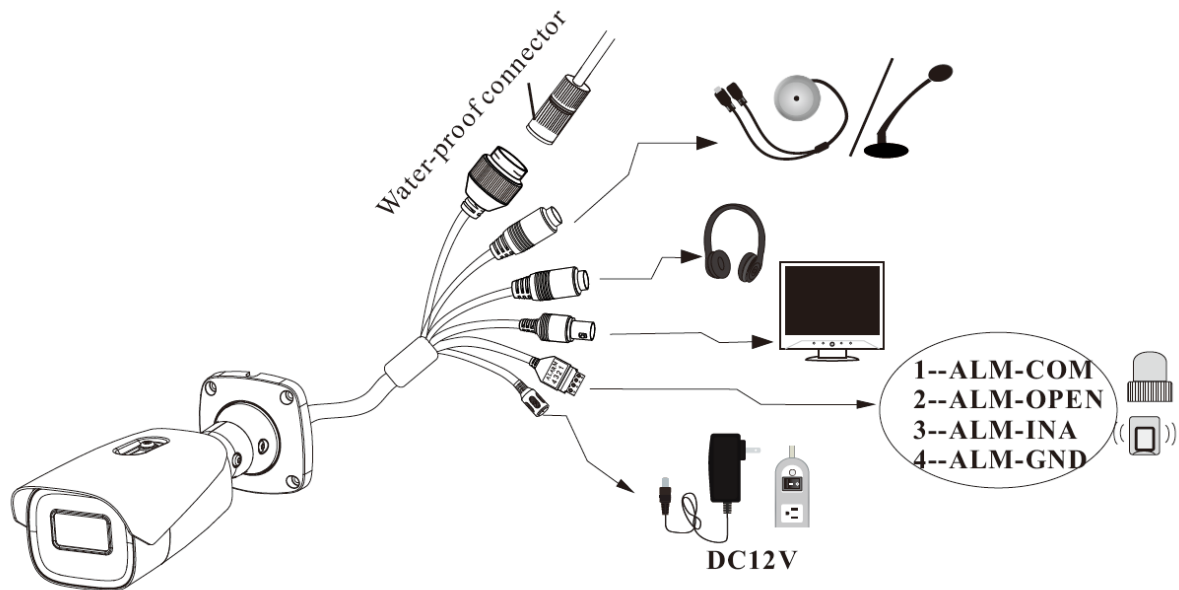


## Alarm Connection

**Alarm Input:** Join the grounding ends of the sensor and the camera and then connect the signal cable of the sensor to the alarm input port of the camera.

**Alarm Output:** Loosen the screws in the alarm output port. Then insert the signal wires of the alarm output devices into the port of COM and OPEN separately. Finally tighten the screws. Some of the external alarm output devices need the power supply.

## 1.2 GV-GVD12810 Overview

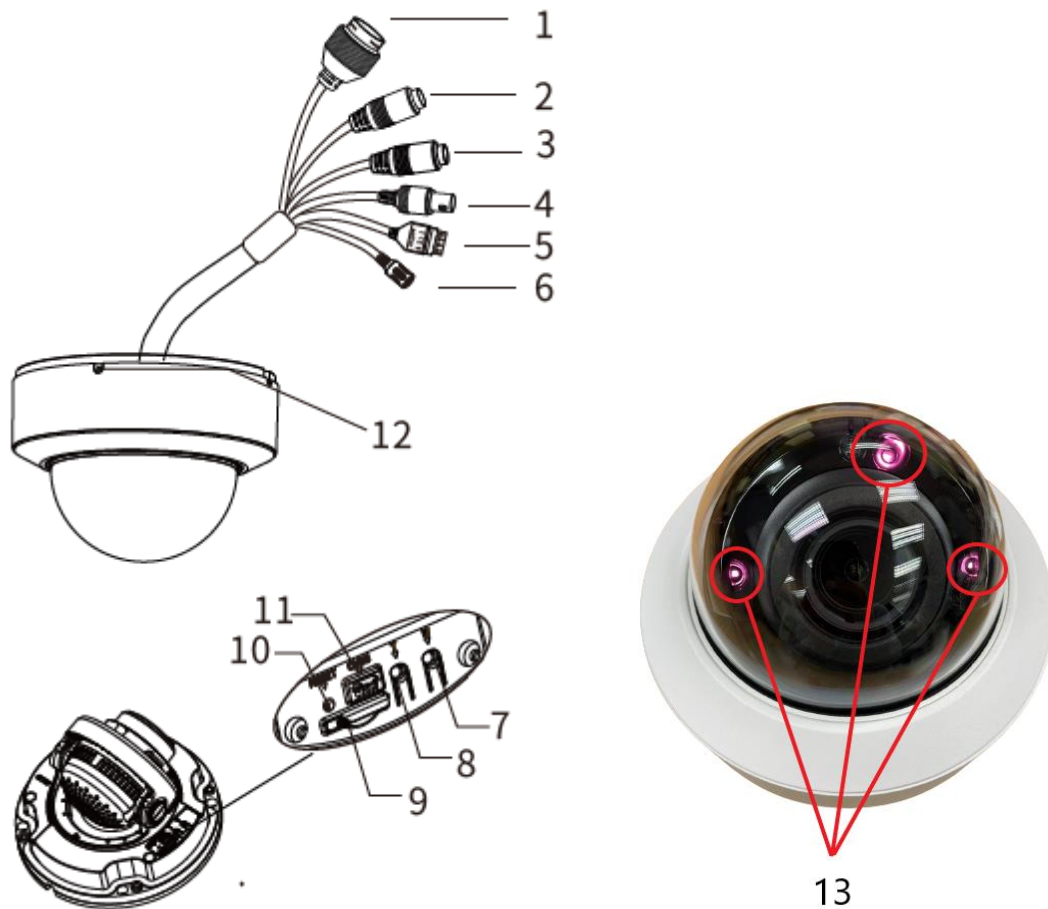


1	Ethernet connector (PoE)	8	Zoom +
2	MIC-Audio input	9	microSD card slot
3	HP-Audio output	10	Default button
4	CVBS Video Output	11	DC IN & CVBS Interface
5	Alarm input/output	12	Microphone
6	Power port (DC 12V)	13	IR LED x 3 (the third LED light will be on at long shots)
7	Zoom -		

### Note:

1. It is recommended to install the water-proof connector for outdoor installation.
2. To load default settings, press and hold the default button for 10 seconds.

### IMPORTANT:

You must wear anti-static gloves or discharge static electricity before removing the lower dome (bubble).

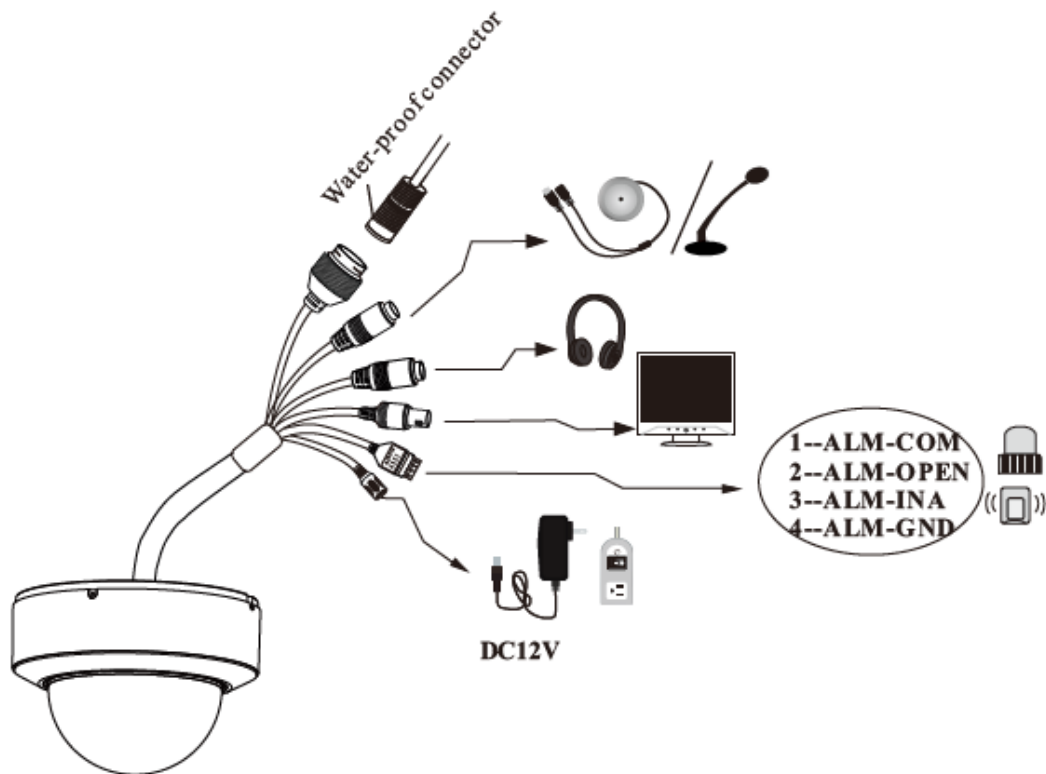

### Alarm Connection


**Alarm Input:** Join the grounding ends of the sensor and the camera and then connect the signal cable of the sensor to the alarm input port (ALM-INA) of the camera.

**Alarm Output:** Loosen the screws in the alarm output port. Then insert the signal wires of the alarm output devices into the port of OPEN and COM separately. Finally tighten the screws. Some of the external alarm output devices need the power supply.

## 2. Installation

- Ensure the wall or ceiling is strong enough to support **three times** the weight of the camera.
- Install the camera in a **dry environment**. Reattach the lower dome **within 4 hours** of removing it.
- **Avoid direct contact** with the dome during installation.
- **Do not remove the protective film** until installation is complete.

### 2.1 Connecting the Network Cable

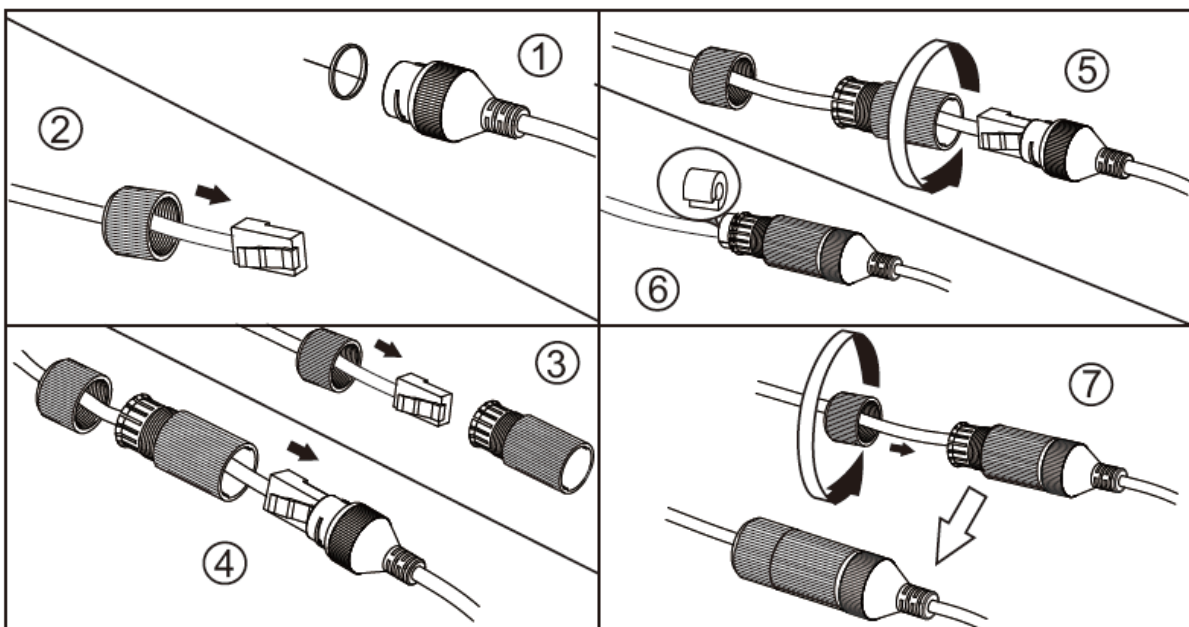


**Note:** If the RJ 45 connector of the network cable has a jacket and cannot be threaded through the kit, remove the jacket. If the jacket cannot be removed, cut off the connector and install an RJ 45 connector without the jacket.


## 2.2 GV-GBL12811 Installation

Please make sure that the wall or ceiling is strong enough to withstand 3 times the weight of the camera. Please install the camera in a dry environment. You should reinstall the cover of the camera less than 4 hours after removing it.

1. Drill the screw holes and the cable hole (if you want to route through the ceiling) on the wall or ceiling according to the drill template.

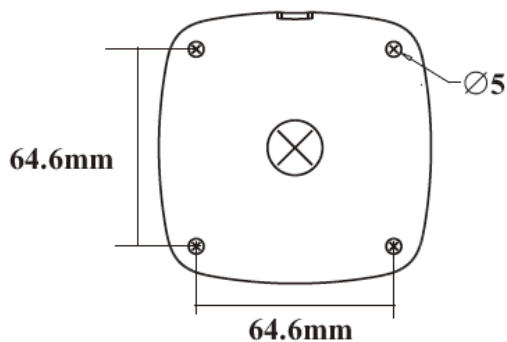


2. Route the cables and connect the relevant cables.
3. Fasten the mounting base to the wall with the screws provided.

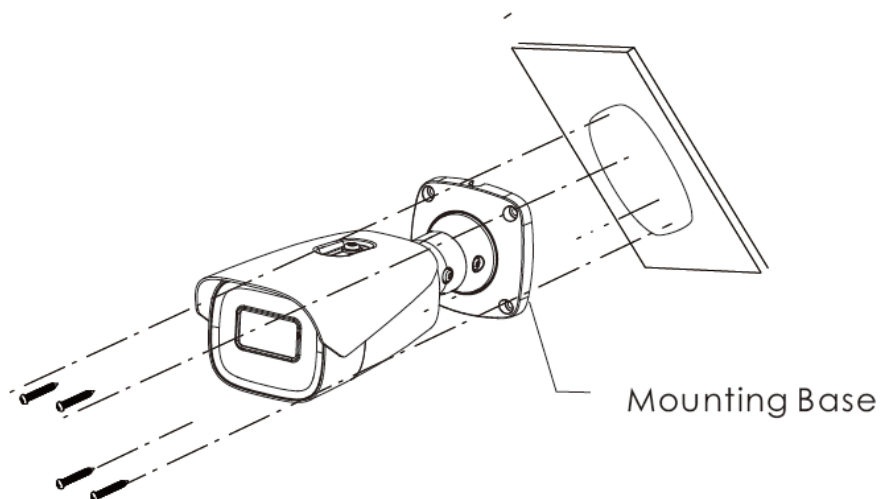


4. Bracket adjustment. Before adjustment, preview the image of the camera on a monitor (see the figure of step 5) and then loosen the lock screws to adjust the view angle of the camera. After that, tighten the lock screws.

5. Open the cover of the camera as shown in the following figure and then insert a microSD card. After that, press the T or W button to obtain an optimum image. Before adjustment, view the image of the camera on a monitor.

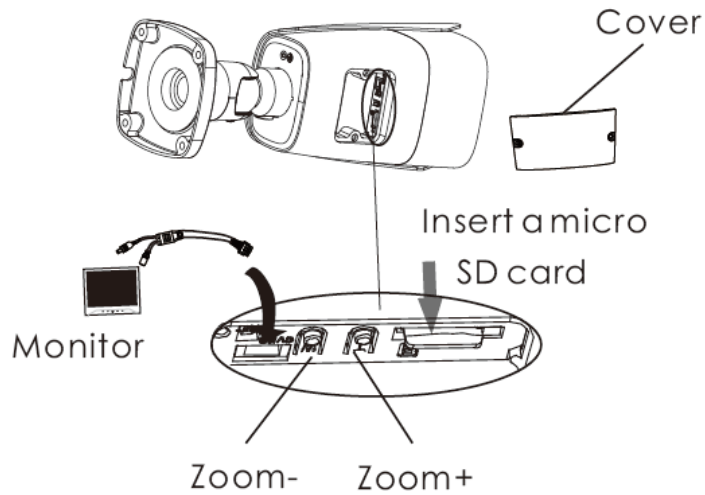

6. Install the cover back to the camera and secure it firmly with the screws.

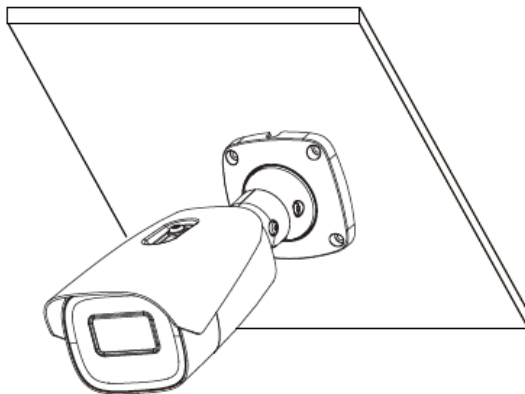

**Note:** Please install the cover back in the same way you disassemble it, in case the sealing performance is affected.


## 2.3 GV-GVD12810 Installation

Please make sure that the wall or ceiling is strong enough to withstand 3 times the weight of the camera. Please install the camera in a dry environment. You should reinstall the cover of the camera less than 4 hours after removing it. Don't remove the protective film until the installation is complete.


### **IMPORTANT:**

You must wear anti-static gloves or discharge static electricity before removing the lower dome (bubble).


1. Rotate the trim ring anticlockwise to remove it from the camera.

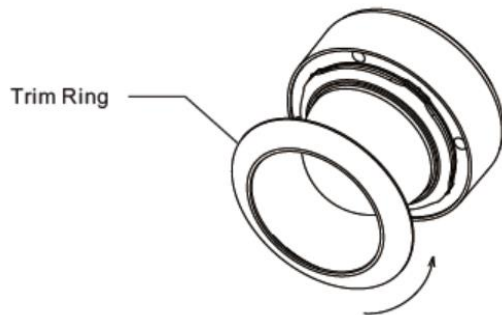


2. Attach the drill template to the place where you want to fix the camera and then drill 4 screw holes and 1 cable hole (if you want to route the cables through the ceiling) according to the drill template.

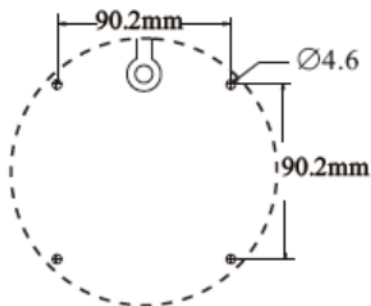


3. Loosen the screws to open the lower dome.

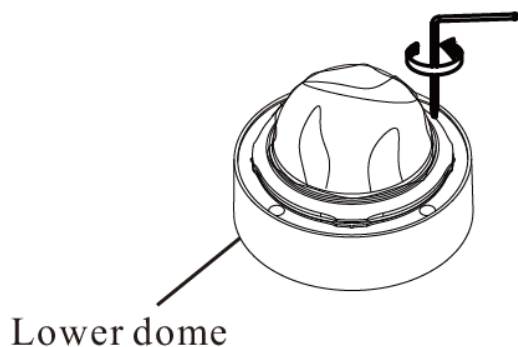


4. Route and connect these cables. Then secure the camera to the ceiling or wall with the screws provided.

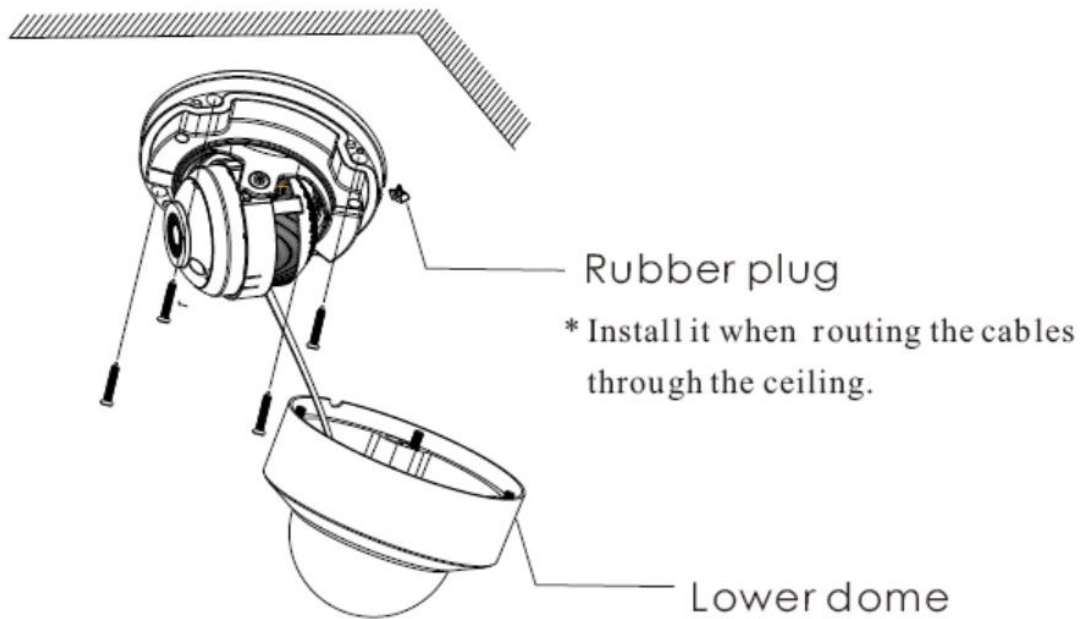


5. Three-axis adjustment. Before adjustment, preview the image of the camera on a monitor and then adjust the camera according to the figure below to get an optimum angle.

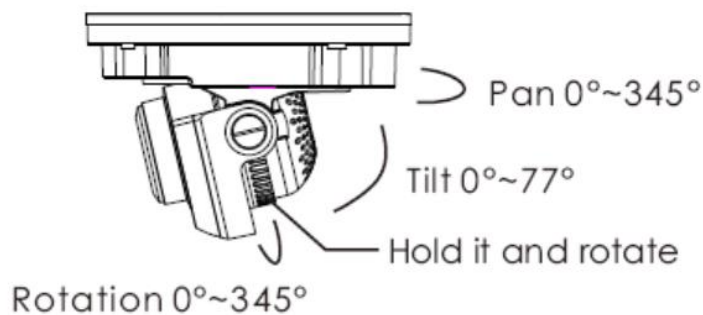


6. Install a microSD card.

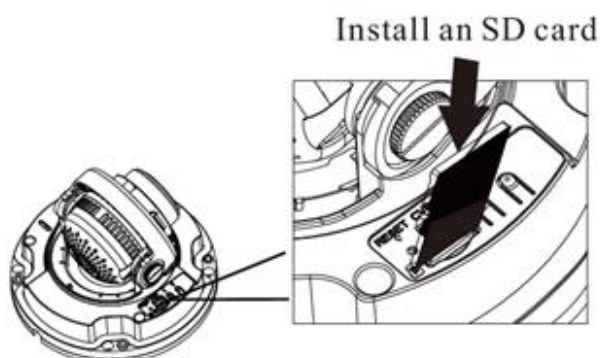

7. View the camera image on a monitor, and then press the T (Zoom +) or W (Zoom -) button to adjust the zoom for an optimum image.

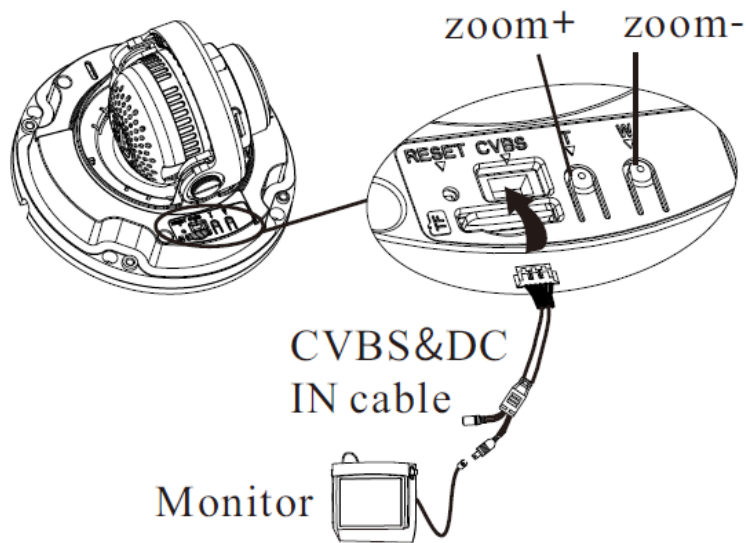

8. Install the lower dome back to the camera and fasten it with screws. Then put the trim ring onto the lower dome and then rotate it clockwise until it is locked. Finally, remove the protection film softly.

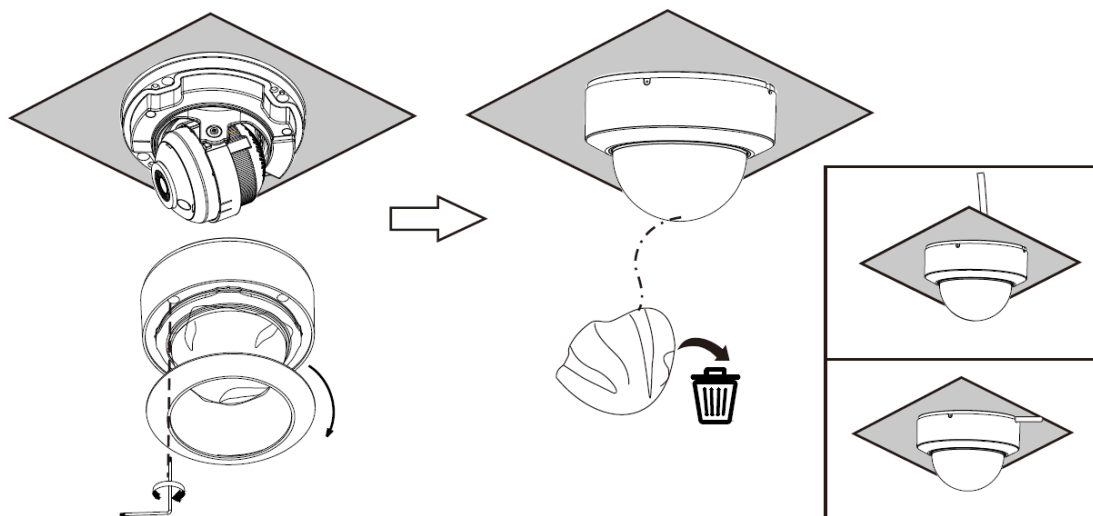

## 3. Accessing the Network Camera


### 3.1 Looking Up the Dynamic IP Address


By default, when the camera is connected to a LAN with the DHCP server, it is automatically assigned with a dynamic IP address. Follow the steps below to look up its IP address.




---

#### Note:


1. By default, the Administrator's username is **admin** and cannot be modified.
  2. This function is only applicable on GV-IP Device Utility V8.9.8 or later.
- 

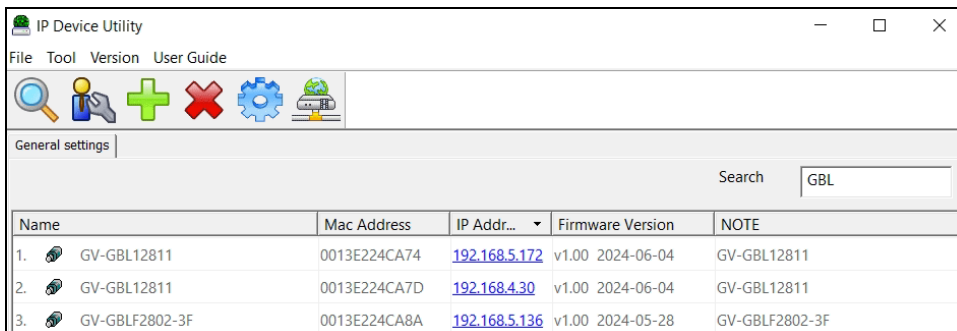1. Make sure the PC used to configure the IP address is under the same LAN as the camera. Download and install **GV-IP Device Utility** from the company [website](#).
2. On the GV-IP Utility window, click the  button to search for IP devices connected to the same LAN. To sort, click the **Name** or **Mac Address** column.
3. Find the camera with its Mac Address, and click on its IP address.



Name	Mac Address	IP Addr...	Firmware Version	NOTE
1.  GV-GBL12811	0013E224CA74	<a href="#">192.168.5.172</a>	v1.00 2024-06-04	GV-GBL12811
2.  GV-GBL12811	0013E224CA7D	<a href="#">192.168.4.30</a>	v1.00 2024-06-04	GV-GBL12811
3.  GV-GBLF2802-3F	0013E224CA8A	<a href="#">192.168.5.136</a>	v1.00 2024-05-28	GV-GBLF2802-3F

4. For first-time users, you are requested to create a password.

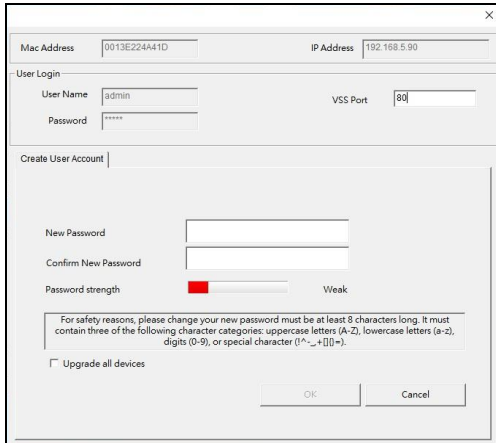

5. Type a new password and click **OK**.
6. Click its IP address on the Utility window again and select **Web Page** to access its Web interface.
7. Type the set password on the login page and click **Login**.

---

**Note:**

1. The Administrator's default username is admin and cannot be modified.
  2. To change the password using GV-IP Device Utility, click on the camera's IP address, and select **Configure > Change Password**. Alternatively, you can change the password on the camera's Web interface by clicking **Config→Security→User**.
-

## 3.2 Configuring the IP Address


If the camera is connected to a LAN without a DHCP server, the default IP address will be **192.168.0.10**. Follow the steps below to modify the IP address to avoid IP conflict with other GV-IP devices on the same LAN.









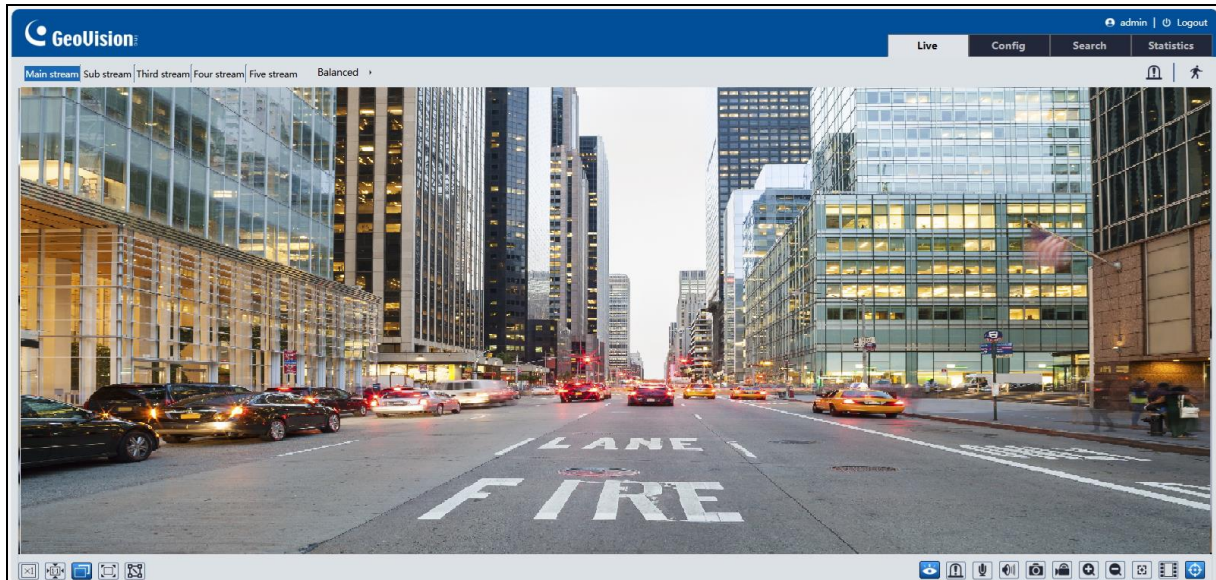





















1. Open your Web browser, and type the default IP address **192.168.0.10**.
2. Type the default username **admin** and a password. Click **Login**.
3. Go to **Config > Network > TCP/IP** to set the IP address.
4. Select **Use the following IP address** and enter the static IP address and other parameters.











IPv4	IPv6	PPPoE Config	IP Change Notification Config
<input type="radio"/> Obtain an IP address automatically			
<input checked="" type="radio"/> Use the following IP address			
IP Address	<input type="text" value="192.168.226.201"/>	<input type="button" value="Test"/>	
Subnet Mask	<input type="text" value="255.255.255.0"/>		
Gateway	<input type="text" value="192.168.226.1"/>		
Preferred DNS Server	<input type="text" value="210.21.196.6"/>		
Alternate DNS Server	<input type="text" value="8.8.8.8"/>		

## 4. The Web Interface

Once you log in the Web interface, you will see the live view as shown below.



Icon	Description	Icon	Description
	Original size		Sensor alarm indicator
	Fit correct scale		Motion alarm indicator
	Auto (fill the window)		Color abnormal indicator
	Full screen		Abnormal clarity indicator
	Measure tool		Scene change indicator
	Start/stop live view		Audio exception indicator
	Enable/disable alarm output		Alarm output indicator
	Enable or disable audio alarm		Audio alarm indicator
	Start/stop two-way audio		Line crossing indicator
	Enable/disable audio		Region intrusion indicator
	Snapshot		Region entrance indicator
	Start/stop local recording		Region exiting indicator
	Zoom in		Face detection indicator
	Zoom out		Target counting by line indicator
	AZ control (only available for models with motorized zoom lens)		Target counting by area indicator

Icon	Description	Icon	Description
	Face capture (when face event is selected)		Object detection indicator (object abandoned/missing)
	Video metadata (when smart event is selected)		Heat map indicator
	Rule information display		Loitering detection indicator
	PTZ control		Illegal parking detection indicator
	SD card recording indicator		Video metadata indicator

---

**Note:**


1. The features described in the above table vary among camera models and versions. Some features may not be available in your camera.
  2. **GV-GBL12811** and **GV-GVD12810** support both Face Event and Smart Event.
- 

For detailed information, see *Chapter 2 Live View* in the user's manual.

## 5. Upgrading System Firmware

GeoVision periodically releases updated firmware on the company [website](#). To load the new firmware into the camera, follow the instructions below.

1. On the Web interface, click **Config > Maintenance > Upgrade**.

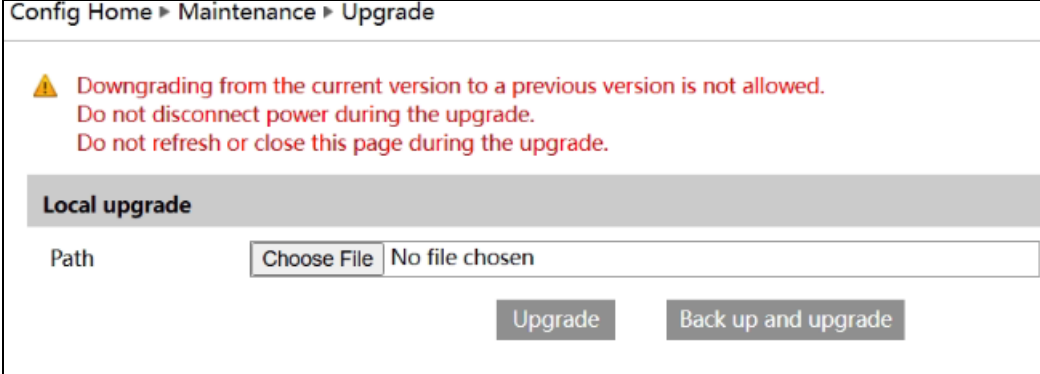

Config Home > Maintenance > Upgrade

**⚠** Downgrading from the current version to a previous version is not allowed.  
Do not disconnect power during the upgrade.  
Do not refresh or close this page during the upgrade.

**Local upgrade**

Path  No file chosen

2. Click **Choose File** to locate the firmware file saved at your local computer.
3. Click the **Upgrade** or **Backup and upgrade** button to start upgrading the firmware.
4. Enter the password and the camera will restart automatically.

If “Back up and upgrade” is selected, the configuration file will be exported to your local PC before starting upgrading

---

**Note:** Do not close the browser or disconnect the camera from the network during the upgrade.

---

## 6. Restoring to Factory Default


If for any reason the camera is not responding correctly, you can restore the camera back to its factory default settings using the Web interface or the Load Default Button.

### On the Camera

1. Find the **Reset** button on the camera (see *1. Overview* in the Quick Start Guide).
2. Press and hold the button for more than 10 seconds to restore to the factory default setting.

### On the Web Interface

1. On the Web interface, click **Config > Maintenance > Backup & Restore**.
2. Click **Restore Factory Settings** and then verify the password to restore all system settings to the default factory settings. Or, select **Restore Default Parameters** to restore default settings *without resetting passwords*. You can also select **Keep Image Configuration** to retain the current image settings.

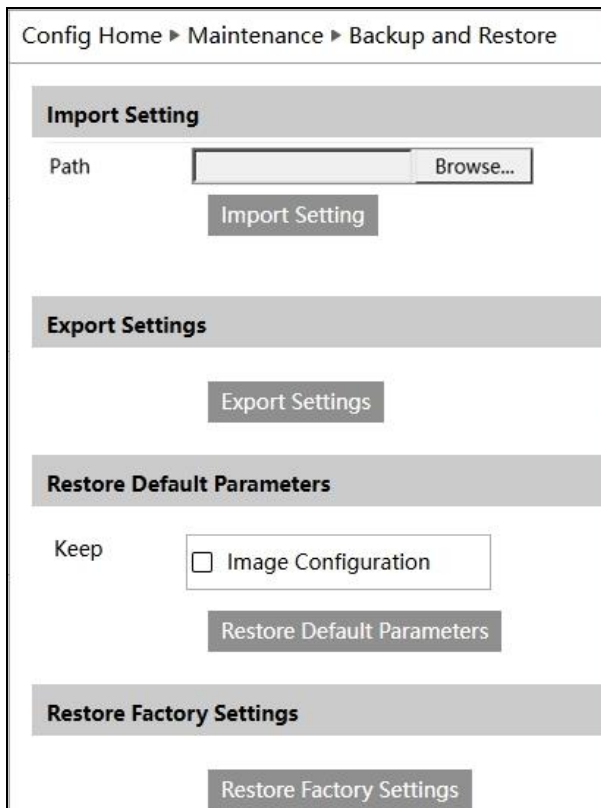

The screenshot shows the 'Backup and Restore' page in the web interface. The breadcrumb trail is 'Config Home > Maintenance > Backup and Restore'. The page is divided into four main sections:

- Import Setting:** Contains a 'Path' input field with a 'Browse...' button and an 'Import Setting' button below it.
- Export Settings:** Contains an 'Export Settings' button.
- Restore Default Parameters:** Contains a 'Keep' section with an unchecked checkbox for 'Image Configuration' and a 'Restore Default Parameters' button below it.
- Restore Factory Settings:** Contains a 'Restore Factory Settings' button.